

CTM-2 Assembly Instructions



Your kit should include one visor with magnetic mesh already attached.



Your kit will also include a single neck guard.




First attach your neck guard by hooking the plastic hook into your helmets rails.



Once hooked it should appear like this on both sides.



Second, attach the neck guard clip into your rails.

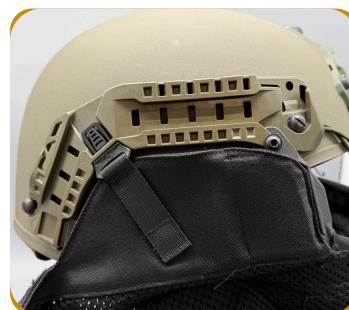

It should look like this on both sides once you finish.



Next you'll mount the visor.



Place the visor clip in the rail notch slot at the top front of the rail. If the clip is sticking out like above, the visor is not completely mounted.



Your clip should have no gap.



Once the visor is mounted, you can fasten the Velcro on the back of the neck guard.



It should appear like this when complete.



The front will automatically close with the magnet once you lock the visor in place.